

ASRockind Technical Reference - Q&A

Question	I'd like to set the system to automatically boot up when switching AC power on. Should I set jumper at [AT mode] and Restore from AC power loss at [Power on] at the same time?
Release date	2020/4/16
Product	All model
FAQ type	<input type="checkbox"/> Specification <input type="checkbox"/> OS & Driver <input checked="" type="checkbox"/> Application <input type="checkbox"/> BIOS/FW <input type="checkbox"/> Others

Answer:

No, please choose only one of the methods at a time.

There are two methods to achieve it: one is set H/W jumper at [AT mode], and the other is to set Restore from AC power loss at [Power on] in BIOS setup.

[AT mode] is controlled by H/W circuit design, and [Restore from AC power loss] is controlled by chipset register.

Please do not use them at the same time; otherwise, unexpected errors may occur.